


During connection the called party can initiate remote instructions by sending the following DTMF commands:

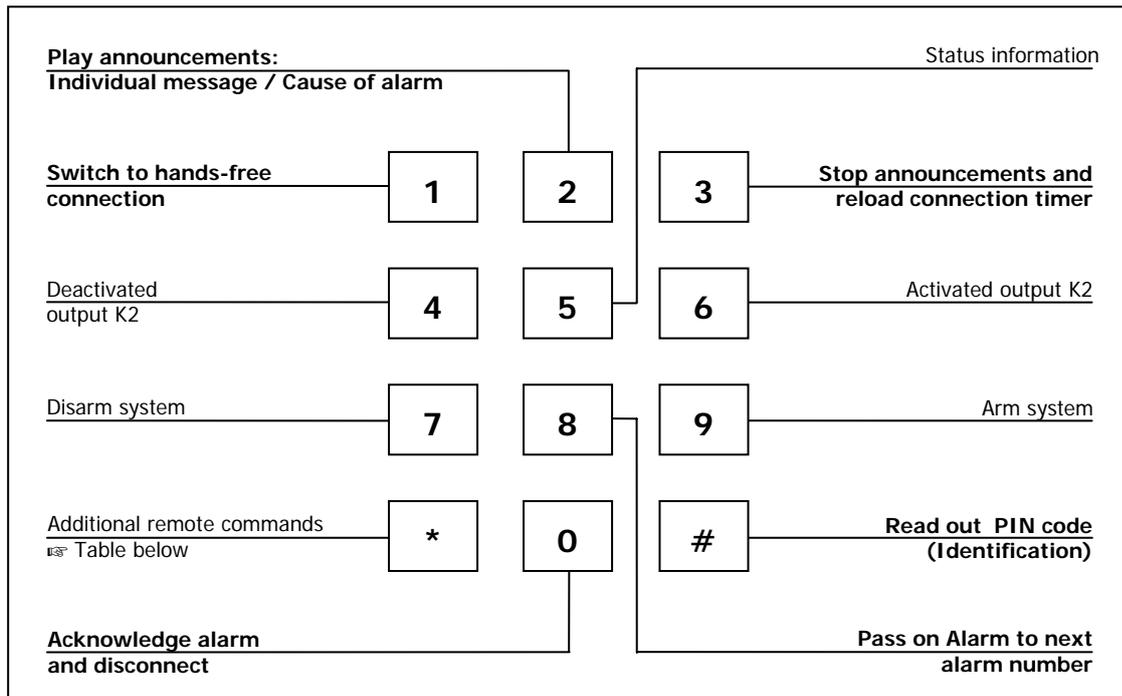


- If more than one alarm number is programmed, the call must be acknowledged /answered by sending DTMF command **0**. Otherwise Exicall EN70 start to dial the next alarm number.
- If you want to pass on the alarm to the next alarm number immediately, you can do so by sending DMF command **8**.

Additional remote commands

Do not delay more than two seconds between two digits.

DTMF commands		
* * 0	Read out/ Modify calling number sequence (1->2->3)	
* * 1	Read out / Modify calling number1	
..	..	
* * 8	Read out / Modify calling number 8	
* * 9	Read out / Modify periodical test number	
* * # 0	Deactivate periodical test to calling number 9	
* * # 1 <n>	Activate periodical test to calling number 9 (first time in 72 h or after <n> hours)	
* * # 2	Start communication test to calling number 9 in two minutes (once only)	
* * # #	Modify individual message	
DTMF commands		EXICALL® EN70 disconnects
* 2	Close contact K3 for 2 seconds	Yes
* 3	Close contact K3 for 4 seconds	Yes
* 4	Close contact K3 for 8 seconds	Yes
* 5	Contact K3 on 3s, off 1s, on 3s	Yes
* 6	Close contact K3 for 2 seconds	No
* 7	Close contact K3 for 4 seconds	No
* 8	Close contact K3 for 8 seconds	No
* 9	Close contact K3 until disconnection	No
* 0	Disconnect if S1 (door contact) is active	If input S1 is active
* 1	EXICALL® EN70 disconnects	Yes

 Remote access by dialling-in



There are two ways of remote access: <with PIN-Code protection> or <without PIN-Code> according to selected Profil. ☞ P.7

Access without PIN-Code



Dial phone number of EXICALL® EN70. After selected ringing-cycles ☞ P.26 EXICALL® EN70 answers call and changes to handsfree connection. This change will be signaled by three Gong and the green "Speak"-Symbol (EN81-70). So a person inside the cabin will be informed about the established handsfree connection.

Access with PIN-Code

Dial number of EXICALL® EN70. After selected ringing-cycles ☞ P.26 EXICALL® EN70 answers call and asks for PIN (Default = 0000). If the correct PIN-Code is entered, EXICALL® EN70 changes to service-mode where the microphone and speaker remain inactive followed by the announcement "to stop prees 0, to speak press 1".

With key **1** you can change to handsfree-connection. This change will be signaled by three Gong and the green "Speak"-Symbol (EN81-70). So a person inside the cabin will be informed about the established handsfree connection.

Special: Two step dialling-in

Dial phone number of EXICALL® EN70. Let it ring two tmied and hang-up. Wiat for 20 seconds and re-dial phone number. After selected ringing-cycles ☞ P.26 EXICALL® EN70 answers call!

EXICALL EN70

Transmitting path

Alarm organisation

